



Industrial Conveyor Specialists

**Installation, Maintenance & Parts Manual
For**

**MODEL 350
Pro-Feed CONVEYOR**

For Additional copies of this manual, please visit our website at
www.titanconveyors.com

Go to Info Center, Select the Maintenance Manual Tab
and select the manual for your model conveyor
or click on the link below.


<https://www.titanconveyors.com/info-center#823236-maintenance-manuals>



**Titan Conveyors
735 Industrial Loop Road
New London, WI 54961
920-982-6600
800-558-3616
FAX 920-982-7750**

**E-mail: sales@titanconveyors.com
Website: www.titanconveyors.com**

Serial No.

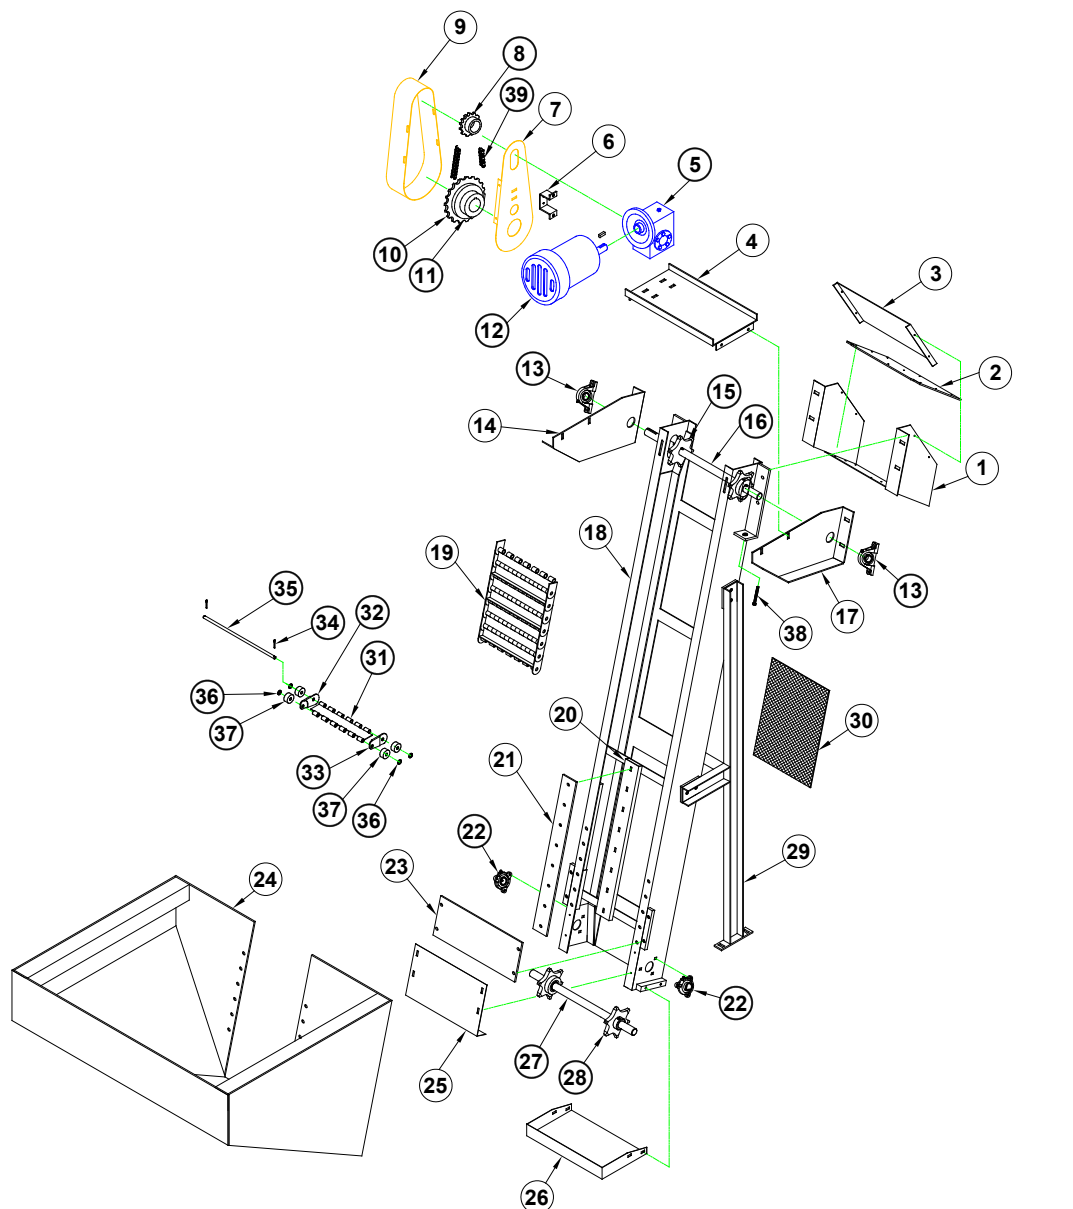

- | | | |
|-------------------------------|-----------------------|---------------------------------|
| 1. DISCHARGE CHUTE | 14. DRIVE PLATE L/H | 27. ●INFEED SHAFT |
| 2. DISCHARGE CHUTE WEAR STRIP | 15. ●BELT SPROCKET | 28. ●BUSHED INFEED SPROCKET |
| 3. DISCHARGE CHUTE COVER | 16. ●DRIVE SHAFT | 29. HEAVY DUTY SUPPORT |
| 4. MOTORBASE | 17. DRIVE PLATE R/H | 30. EXPANDED METAL BOTTOM PANEL |
| 5. ●REDUCER | 18. FRAME | 31. ●HINGED PLATE |
| 6. GUARD BRACKET | 19. BELT | 32. ●SIDEWING RADIAL - L/H |
| 7. GUARD BACK | 20. IMPACT CHANNEL | 33. ●SIDEWING RADIAL - R/H |
| 8. ●DRIVEN SPROCKET | 21. IMPACT WEAR STRIP | 34. ●COTTER PIN |
| 9. GUARD FRONT | 22. ●3 BOLT BEARING | 35. ●AXLE |
| 10. ●DRIVEN SPROCKET | 23. INFEED BOOT | 36. ●WASHER |
| 11. ●TORQUE LIMITER | 24. HOPPER | 37. ●ROLLER |
| 12. ●MOTOR | 25. END CAP | 38. PUSHER BOLT |
| 13. ●BEARING | 26. PARTS TRAY | 39. ●ROLLER CHAIN |